

Change Relay Names

Start from the Web GUI of your monitor

I'll be using a C315W for this example

Akuvox
Open A Smart World
C315
LogOut

Status	Status				Help
Basic	Product Information				Note: Max length of characters for input box: 255: Broadsoft Phonebook server address 127: Remote Phonebook URL & AUTOP Manual Update Server URL 63: The rest of input boxes Warning: Field Description:
Account	Model	C315W	MAC Address	OC11050E629B	
Network	Firmware Version	115.30.3.217	Hardware Version	3	
Phone	Network Information				
Contacts	Network Type	LAN	LAN Port Type	DHCP Auto	
Upgrade	LAN Link Status	Connected	LAN IP Address	10.100.7.49	
Security	LAN Subnet Mask	255.255.255.0	LAN Gateway	10.100.7.254	
Device Setting	LAN DNS1	9.9.9.9	LAN DNS2	1.1.1.1	
Arming	Primary NTP	0.pool.ntp.org	Secondary NTP	1.pool.ntp.org	
	Account Information				
	Account1	847113243@pbx.aucoud.a..	Account2	None@None	
		Registered		Disbled	

1. In the menus tab, go **Phone > Relay**

Phone

Time/Lang

Call Feature

Display Setting

Audio

Key/Display

Multicast

WebView

Logo

Monitor

Intercom

Relay

App

Lift

Smart Living

Contacts

Upgrade

Security

Relay Display Name: Relays

Remote Control: Disabled

DTMF:

Remote Relay:

DTMF Code1: #

DTMF Code2: #

DTMF Code3: #

Open Relay via HTTP

Status: Enabled

UserName: admin

Password: *****

Softkey In Talking Page

	Status	Display Name	Relay
Key 1	Enabled	TEST 1	Remote Relay HTTP
Key 2	Enabled	AKSKSUJD	Remote Relay HTTP
Key 3	Enabled	37438329	Remote Relay HTTP

Softkey In Home or More Page

Status	Display Name	Relay
Enabled	Gate	Remote Relay HTTP1

Softkey In Monitor Page

Status	Display Name	Relay
Enabled	Gate 1	Remote Relay HTTP

Softkey In Call-Preview Page

Status	Display Name	Relay
Disabled	Unlock	Remote Relay HTTP

255: Broadsoft Phonebook server address

127: Remote Phonebook URL & AUTOP Manual Update

Server URL

63: The rest of input boxes

Warning:

Field Description:

Submit Shortcut

Submit

Cancel

2. Scroll down and there will be sections for enabling relay buttons for both calls and monitoring. Here is where you enable the soft keys for different call/monitoring displays. You can **enable** the button, change its name and define the type of relay it is (You can set to **Config On Cloud**).

- If you want to change the name of the relay in the **Call** screen, go to the **Softkey In Talking Page** section.
- If you want to change the name of the relay on the **Monitor Page**, go to the **Softkey In Monitor Page** section.
- If you want to change the name of the relay in the **Call Preview** screen, go to the **Softkey In-Call Preview** screen.