

E18 Disable Tones

Device » [Audio](#)

Volume Control

Mic Volume	8	(1~15)
Speaker Volume	8	(1~15)
Tamper Alarm Volume	8	(1~15)
Prompt Volume	8	(0~15)

Open Door Tone Setting

Open Door Failed Tone Enabled	☒
Relay ID	RelayA
Open Door Tone Enabled	☒
Open Door Succeed Tone Upload	Import Reset

Hang Up Tone Setting

Hang Up Tone Enabled	☒
Hang Up Tone Upload	Import Reset

Ringback Tone Setting

Ringback Source	Remote,Local As Backup
-----------------	---

- ❖ Go to Device > Audio
- ❖ Untick the “Open Door Failed Tone Enabled”